


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Cooktop, Ceran
	9751752	White
	9751753	Almond
2	9780939	Gasket, Cooktop
3	9751478	Gasket, Console
4	9780742	Gasket, Cooktop
5	9781548	Support, Element
6	9751629	Bracket, Pivot
	9780265	Screw
7	9781553	Brace, Support
8	9750821	Clip, Support (4)
	9751871	Screw
9	9750969	Bumper, Rubber
10	9781497	Hot Light
11		Element, Surface
	3189894	1400W - LR
	3189895	1700W - RF
	3189897	2400W - LF
14	9752233	2500W - RR
15	9781459	Rod, Large Ceran Element
17	341196	Thermo Disc
18	9751800	Cover, Vent
19	9751841	Gasket, Vent Cover
20		Backsplash
	9751266GW	White
	9751266GT	Almond
21	9751984	Bimetal
22		Limiter, Temp.
	3190253	1400W- LR
	3190250	1700W - RF
	3190251	2400W - LF
	3190250	2500W - RR
24	9750273	Receptacle, Light
25	422581	Lamp. Flourescent
26	9751664	Cover, Backsplash
	3149333	Screw (4)
27		Endcap, Backsplash (Right Hand)
	9751268FW	White
	9751268FT	Almond
		(Left Hand)
	9751267FW	White
	9751267FT	Almond
28		Cover, Light
	9751327	White
	9751633	Almond
29	9781118	Starter
30		Trim, Cooktop (Right Hand)
	9751275PW	White
	9751275PT	Almond
		(Left Hand)
	9751276PW	White
	9751276PT	Almond
31	9750866	Holder, Starter
32	9781154	Glass, Backsplash

33	9781460	Rod, Small Ceran Element
----	---------	--------------------------

CONTROL PANEL PARTS

For Models:KERC607EWH2, KERC607EAL2
(White) (Almond)

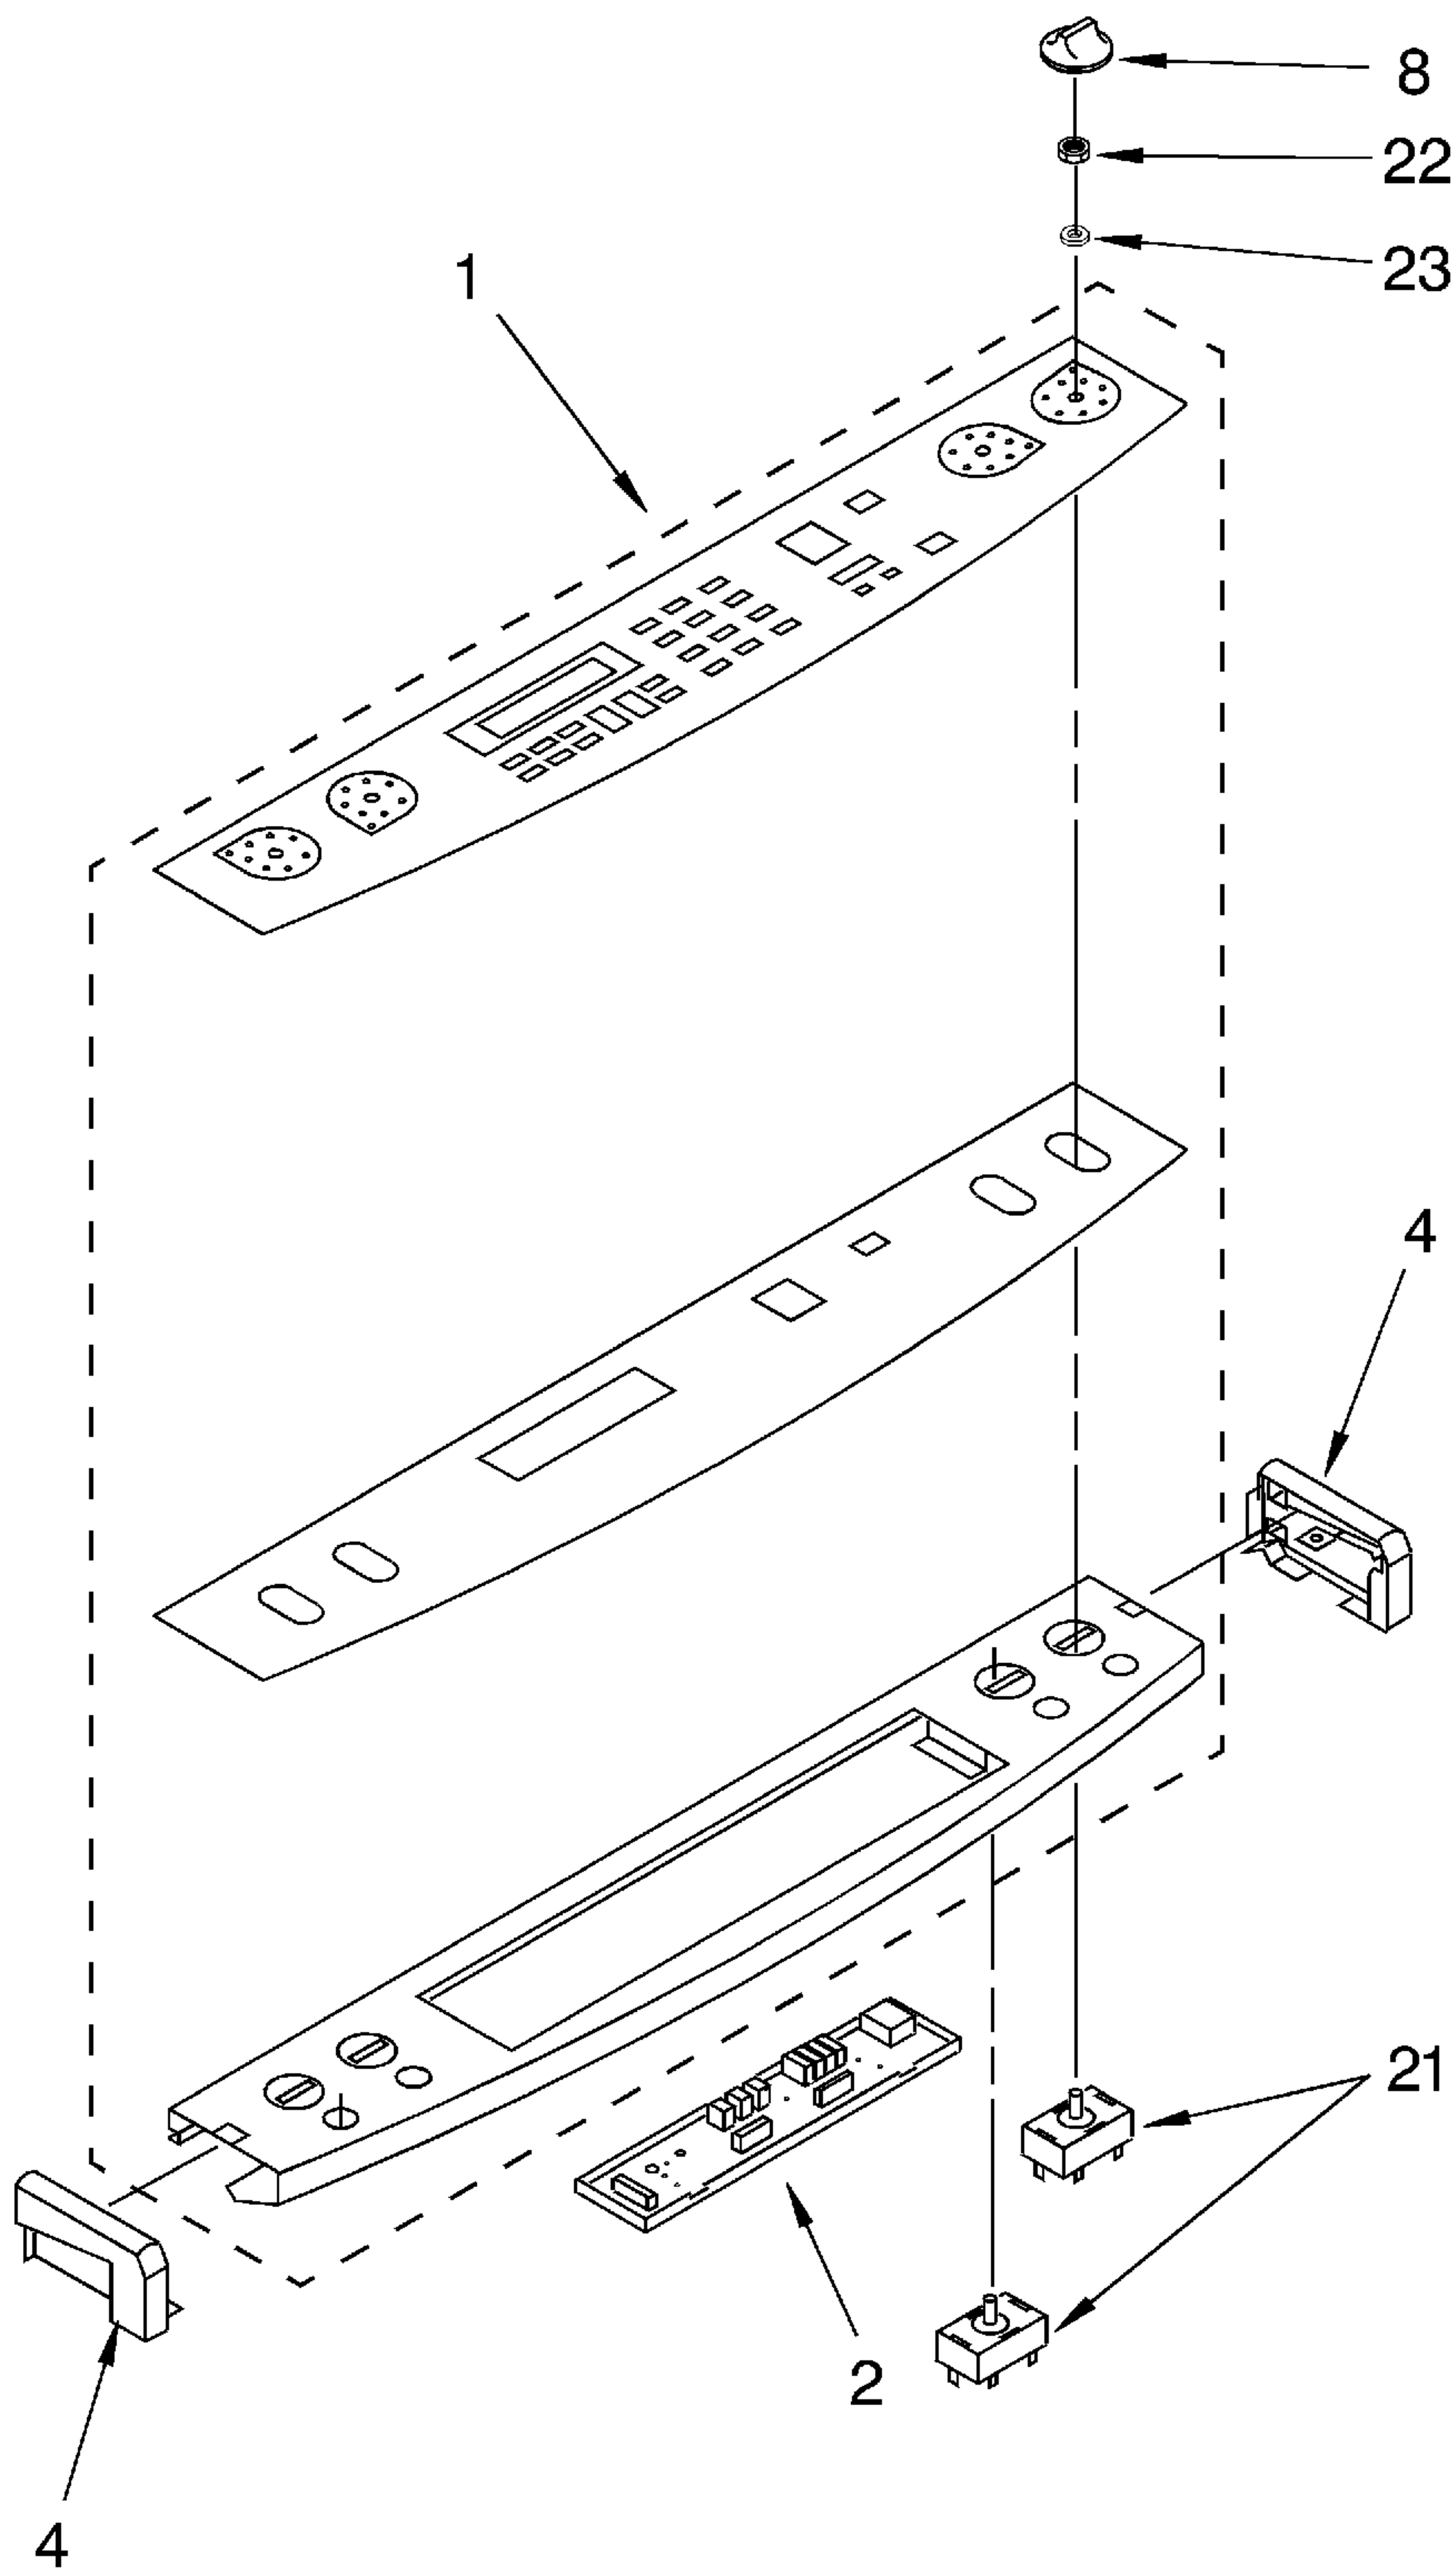


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1		Console, Glass
	9752355CW	White
	9752355CT	Almond
2	9752691	Timer, Electronic
	9780271	Screw, (2)
4		End Cap (Right Hand)
	9751280FW	White
	9751280FT	Almond
		(Left Hand)
	9751279FW	White
	9751279FT	Almond
	9780265	Screw, (4) 10 x 3/8
8		Knobs, Control
	4211909	White
	4211913	Almond
	4211983	Black
21		Switch, Infinite
	9751364	1250-1500W, LR
	9751363	1700W, RF
	9751362	2100-2600W, LF
	9751758	Dual Element, RR
22		Nut, Mounting
	4211830	Single Element
	9751711	Dual Element
23	9781455	Seal, Switch (4)

DOOR AND DRAWER PARTS

For Models: KERC607EWH2, KERC607EAL2
(White) (Almond)

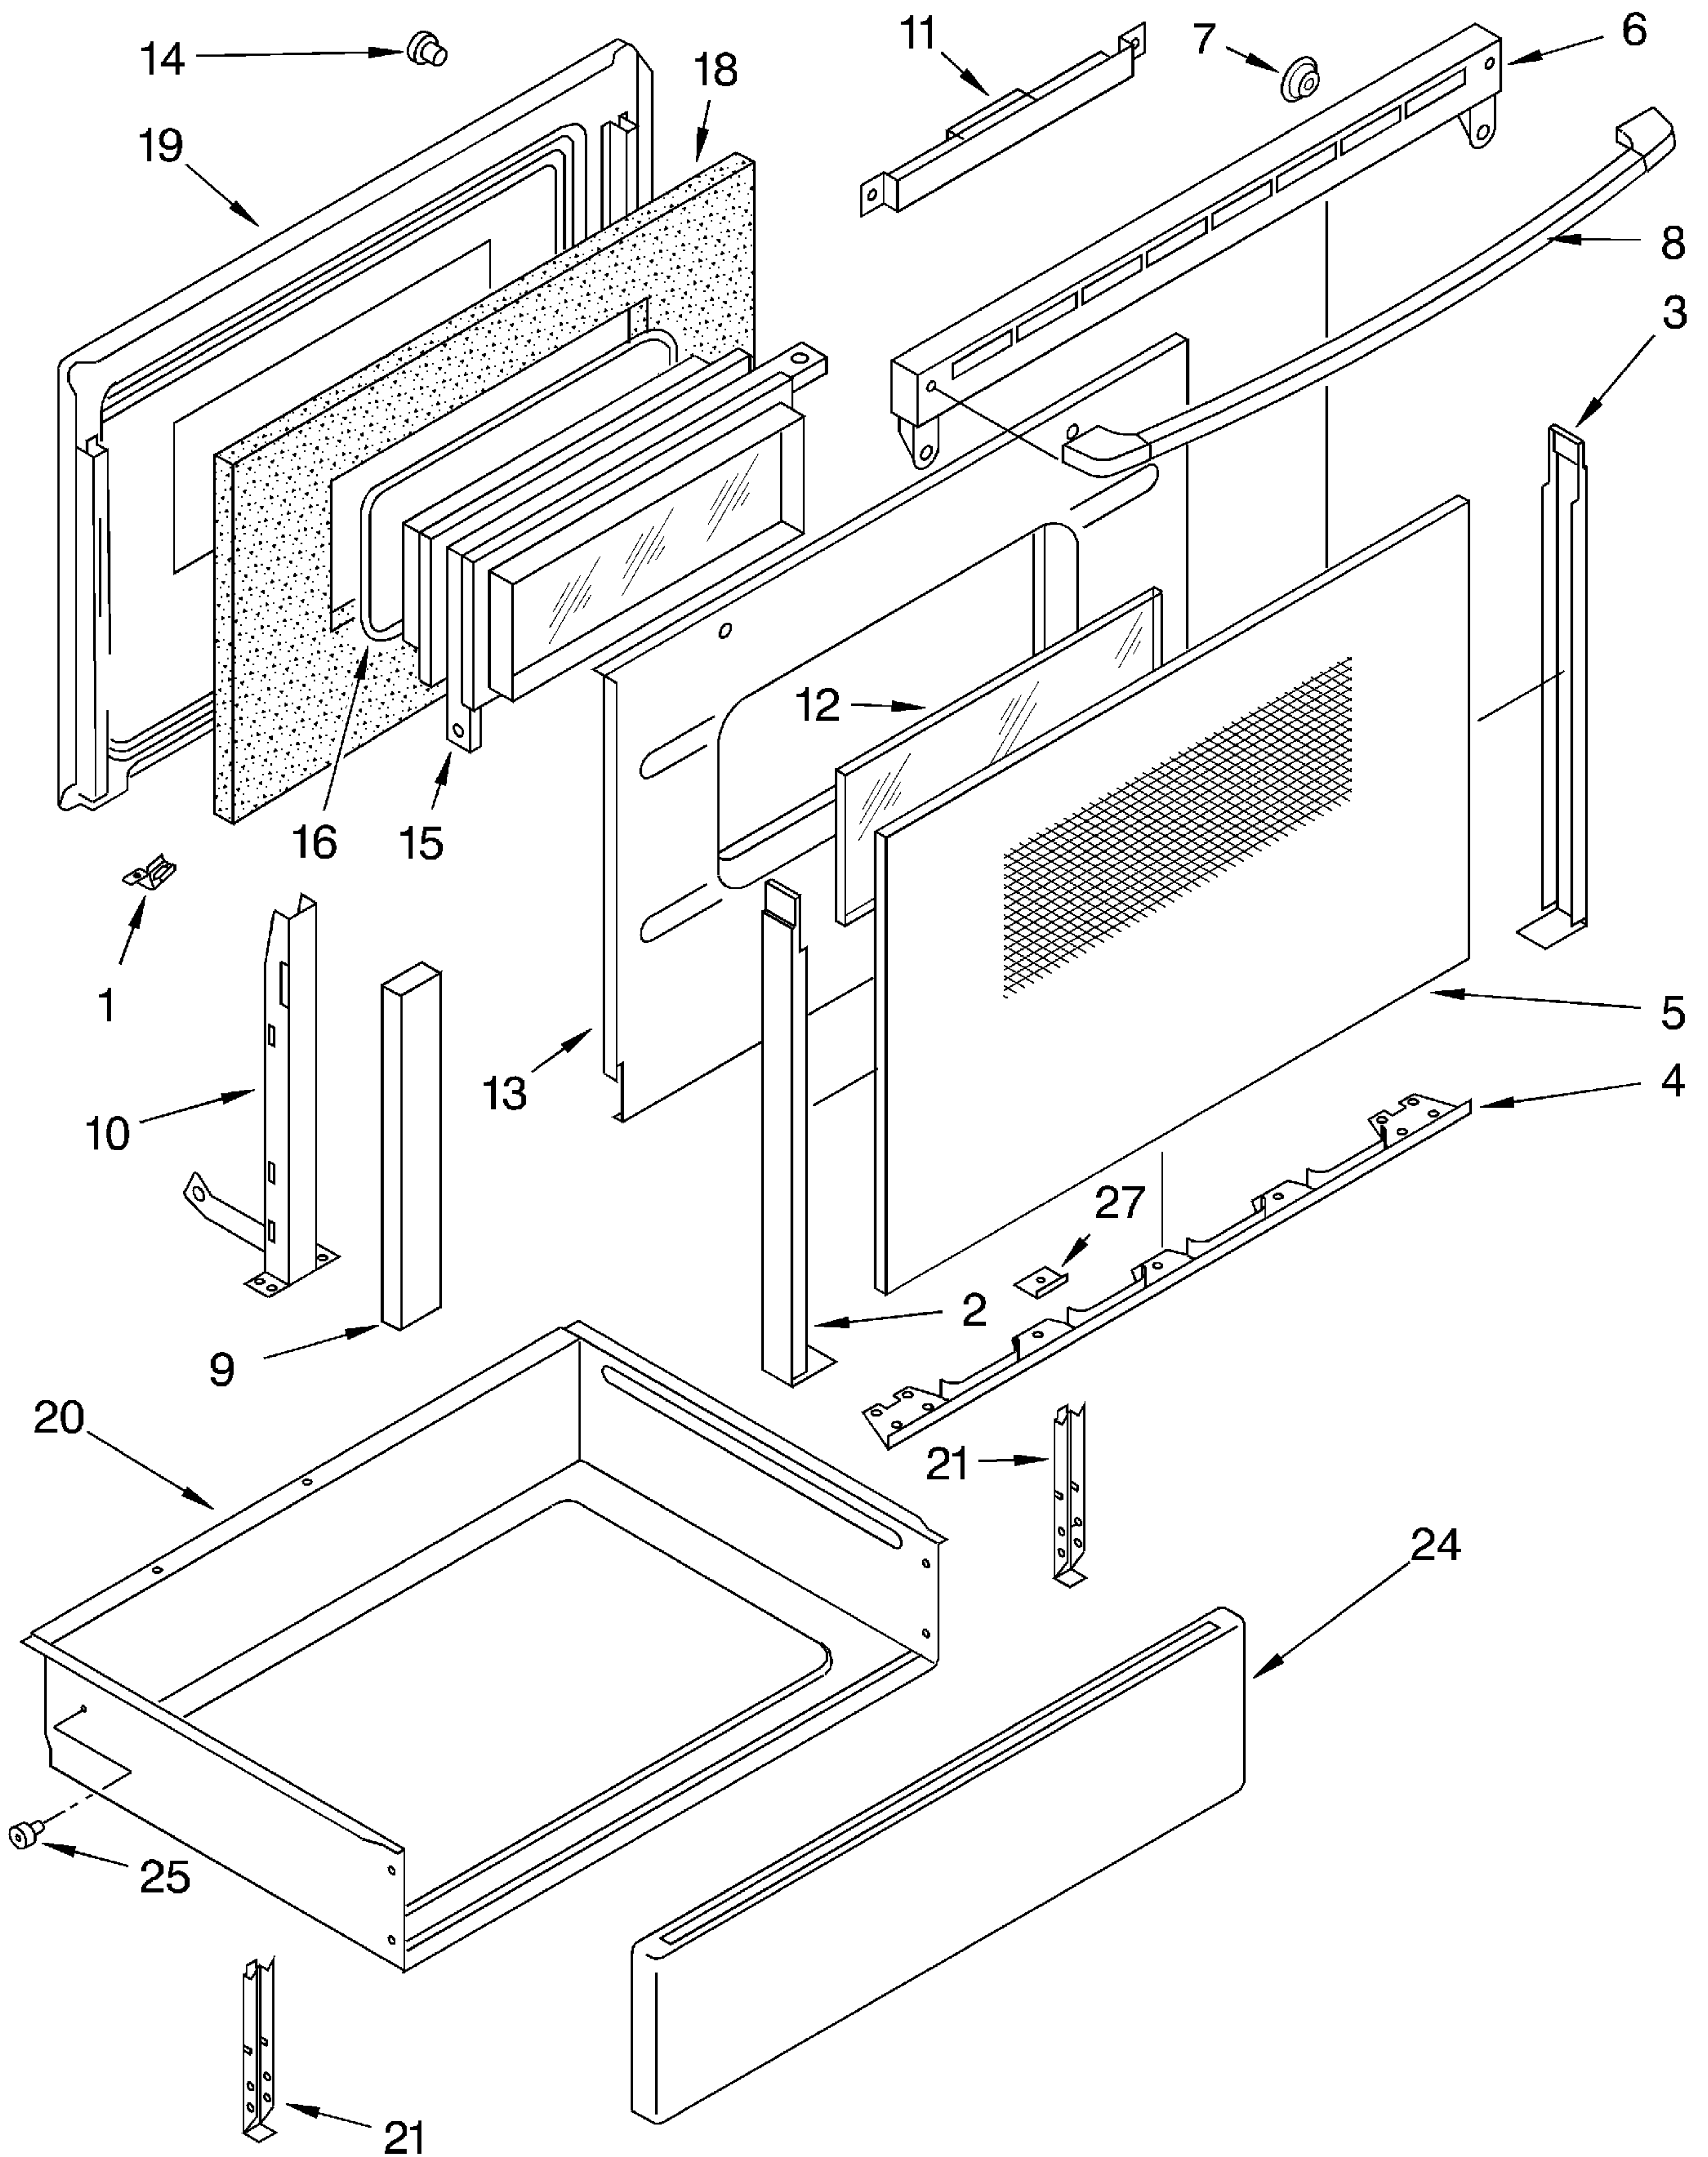


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	9750676	Retainer, Glass
2		Trim, Door-Left
	4212028	White
	9750631PT	Almond
3		Trim, Door-Right
	4212029	White
	9750632PT	Almond
4		Trim, Door Bottom
	9781209PW	White
	9781209PT	Almond
	9780265	Screw, 10 x 3/8
5		Glass, Door
	9781244	White
	9781245	Almond
6		Vent, Door
	9751242GW	White
	9751242GT	Almond
	9781450	Gasket, Door Vent
	9781490	Seal, Door Vent Side
7	9781453	Spacer, Door Vent
8		Handle, Door
	4212069	White
	4421442	Almond
	9781072	Screw (2) 10 x 1/2 (2)
9	9781449	Gasket, Door Glass
10	9750234	Hinge, Door R or L
	9780265	Screw (4) 10 x 3/8
11	9750693	Heat Channel
	9780265	Screw (2) 10 x 3/8
12	9750634	Baffle, Glass
13	9750233	Shield Door
14	9780771	Bumper, Rubber
15	9751245	Window Pack
16	9751135	Seal, Glass
	9780271	Screw (2) 8 x 1/4
18	9750231	Insulation
19	9781197GM	Liner, Door
20	9780583	Drawer & Roller
21	9750169	Bracket, Drawer
	9780272	Screw (4) 10 x 1/2
24		Front, Drawer
	4211992	White
	4211993	Almond
25	423713	Support, Roller
	90296	Clip
27	9781206	Retainer, Glass

OVEN CHASSIS PARTS

For Models: KERC607EWH2, KERC607EAL2
(White) (Almond)

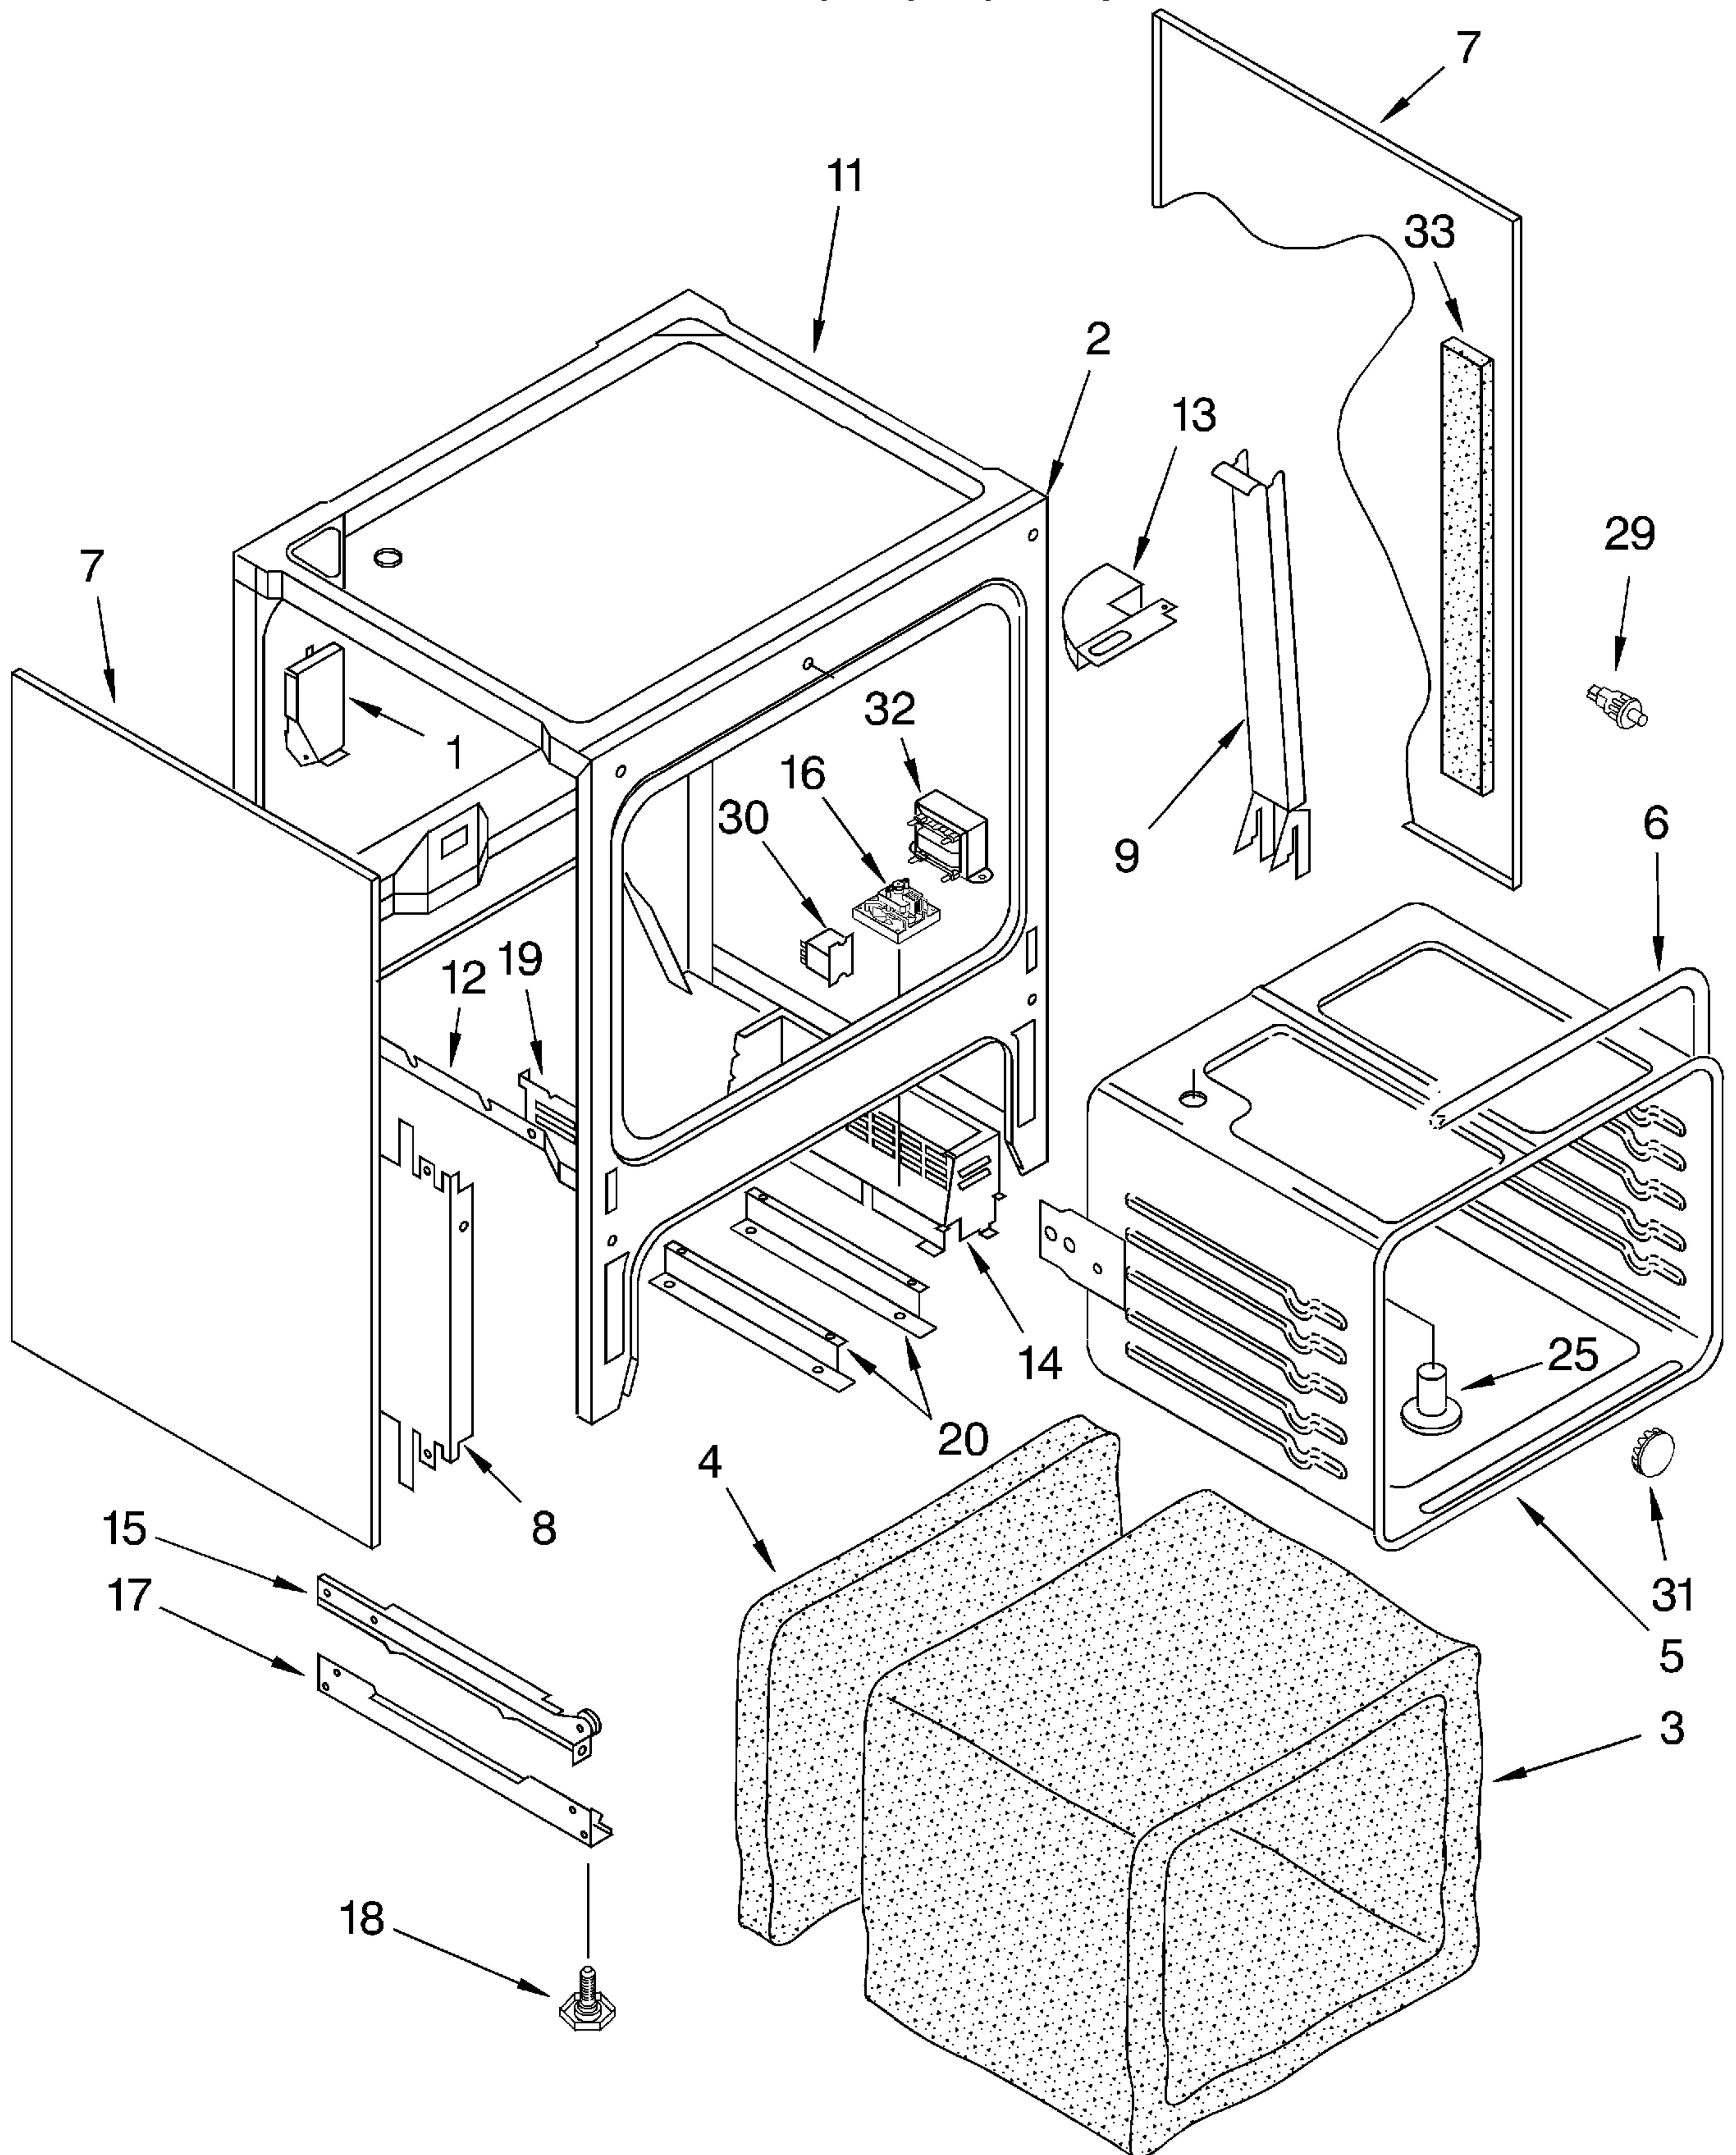


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	9751350	Vent Box, Oven
	9780265	Screw, (6)
2	4212002	Chassis, Front
3	9750222	Insulation, Wrap
4	9750221	Insulation, Rear
5	3191046GM	Oven Liner
6	9750247	Gasket Oven
7		Oven , Side L or R
	4211896	White
	4211897	Almond
	9780265	Screw (4) 10 x 3/8
8	9781447	Shield, Insulation
	9780265	Screw (2)
9	9751789	Fan Duct, Side
	9780265	Screw, (4)
11	9752637	Burner Box
	9780265	Screw (7) 10 x 3/8
	9780275	Screw, (2) 8 x 3/8
12	9750142	Oven Bottom
	9780265	Screw (9) 10 x 3/8
13	9751653	Duct, Top
	9780265	Screw, (2)
14	9751060	Support, Fan
15	9750223	Drawer Rail, Left 10 x 3/8
	9750224	Drawer Rail, Right
	9780265	Screw (2) 10 X 3/8
16	9751020	Motor, Fan
	9751808	Screw, (3) #8 x 1"
17	9750147	Bottom Rail (2)
	9780265	Screw, (8) 10 x 3/8
18	312701	Foot, (4)
19	9750149	Hinge, Door L or R
	9780265	Screw, (2) 10 x 3/8
	9780269	Screw, (2) 8 x 3/8
20	421771	Support Rail, Pan
	9780265	Screw, (2) 10 x 3/8
25	9750736	Vent, Tube
29	9781581	Door Switch
30	9751948	Relay, Dlb.
	9780265	Screw (2)
31	9780578	Button, Plug
32	4450328	Transformer, Light
33	9752654	Insulation, Side

OVEN PARTS

For Models: KERC607EWH2, KERC607EAL2
(White) (Almond)

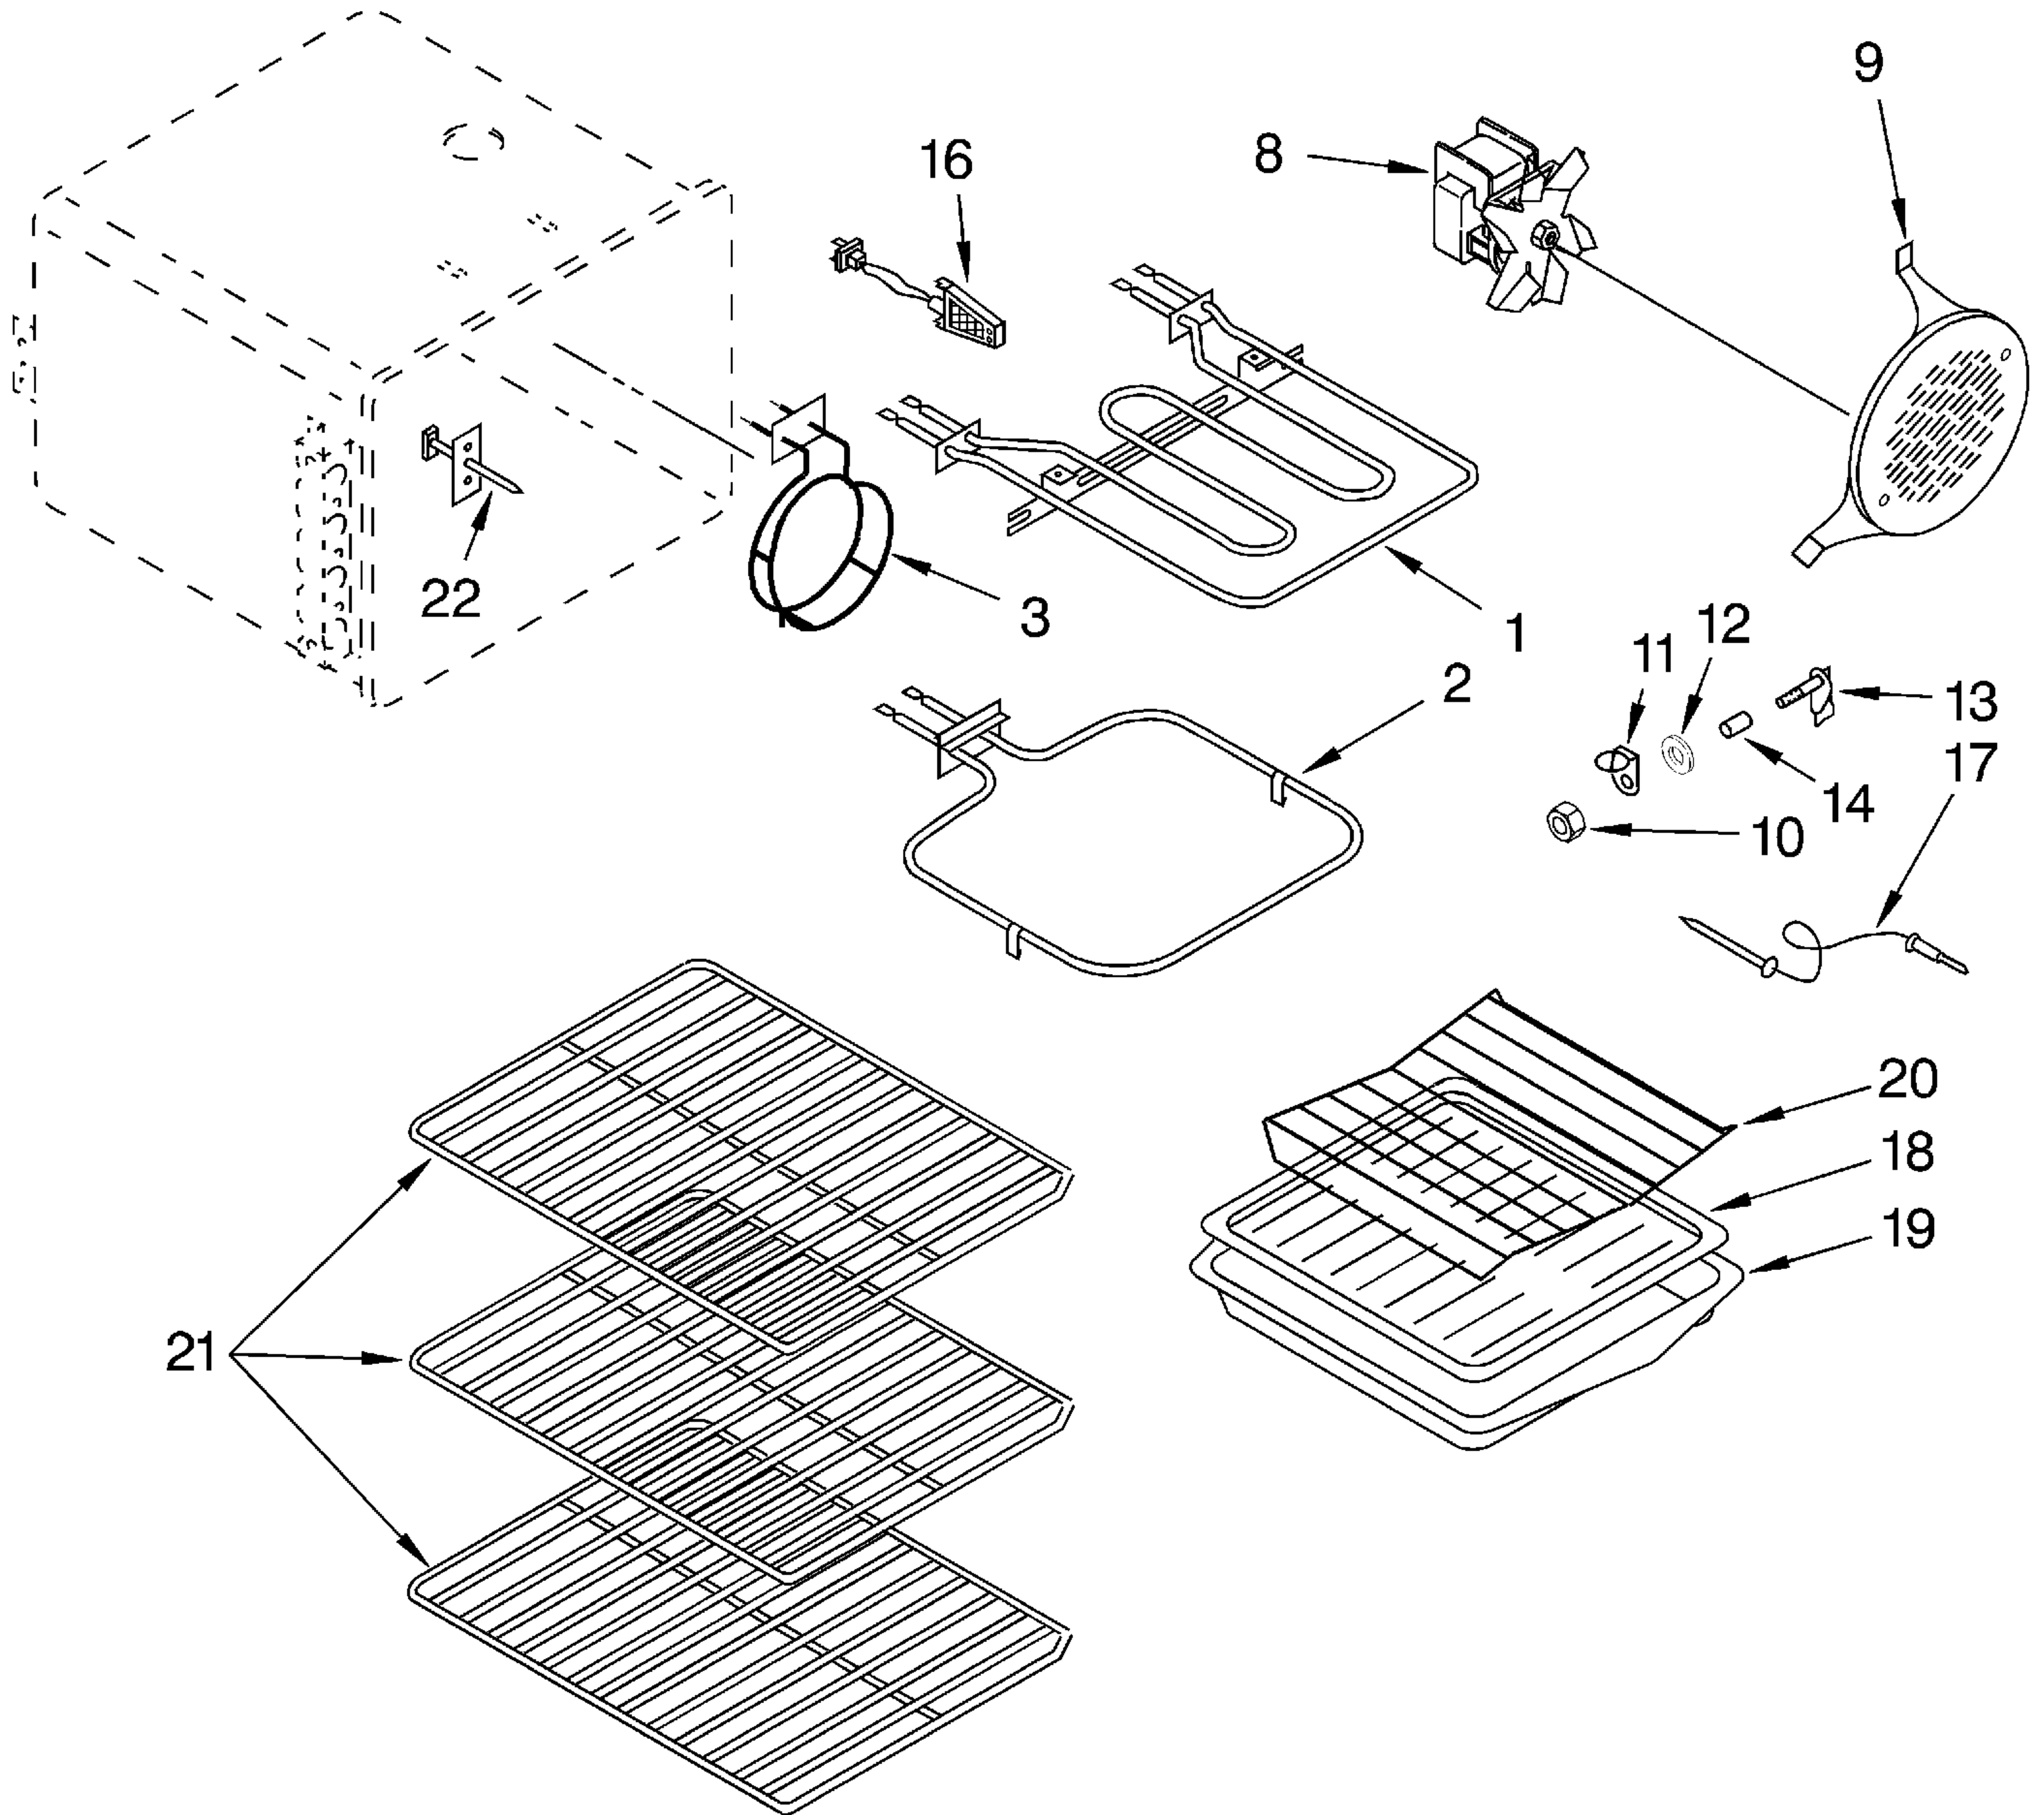


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	9750967	Element, Broil
2	9750213	Element, Bake
3	9751447	Element, Convection
	9780269	Screw, Elements 8-32 x 3/8
	340184	Screw (2) #10-16 x 1 1/2
8	9781543	Assembly, Fan
	9780272	Screw, 10 x 1/2
9	9751904GM	Baffle, Convection
	9780852	Screw, (2) 8 x 3/8
10	4167277	Lock-Nut, Cvr.Jack
11	4167266	Jack Cover
12	4163975	Gasket
13	4173575	Receptacle, Probe
14	3179672	Spacer, Tubing
16	4448972	Oven Light
	9780806	Screw(2)
17	3150144	Probe
18	4421424	Grill, Broiler
19	4211944	Pan, Broiler
20	3181534	Rack, Roasting
21	9750823	Rack, Standard
22	3148440	Sensor

REAR CHASSIS PARTS

For Models:KERC607EWH2, KERC607EAL2
(White) (Almond)

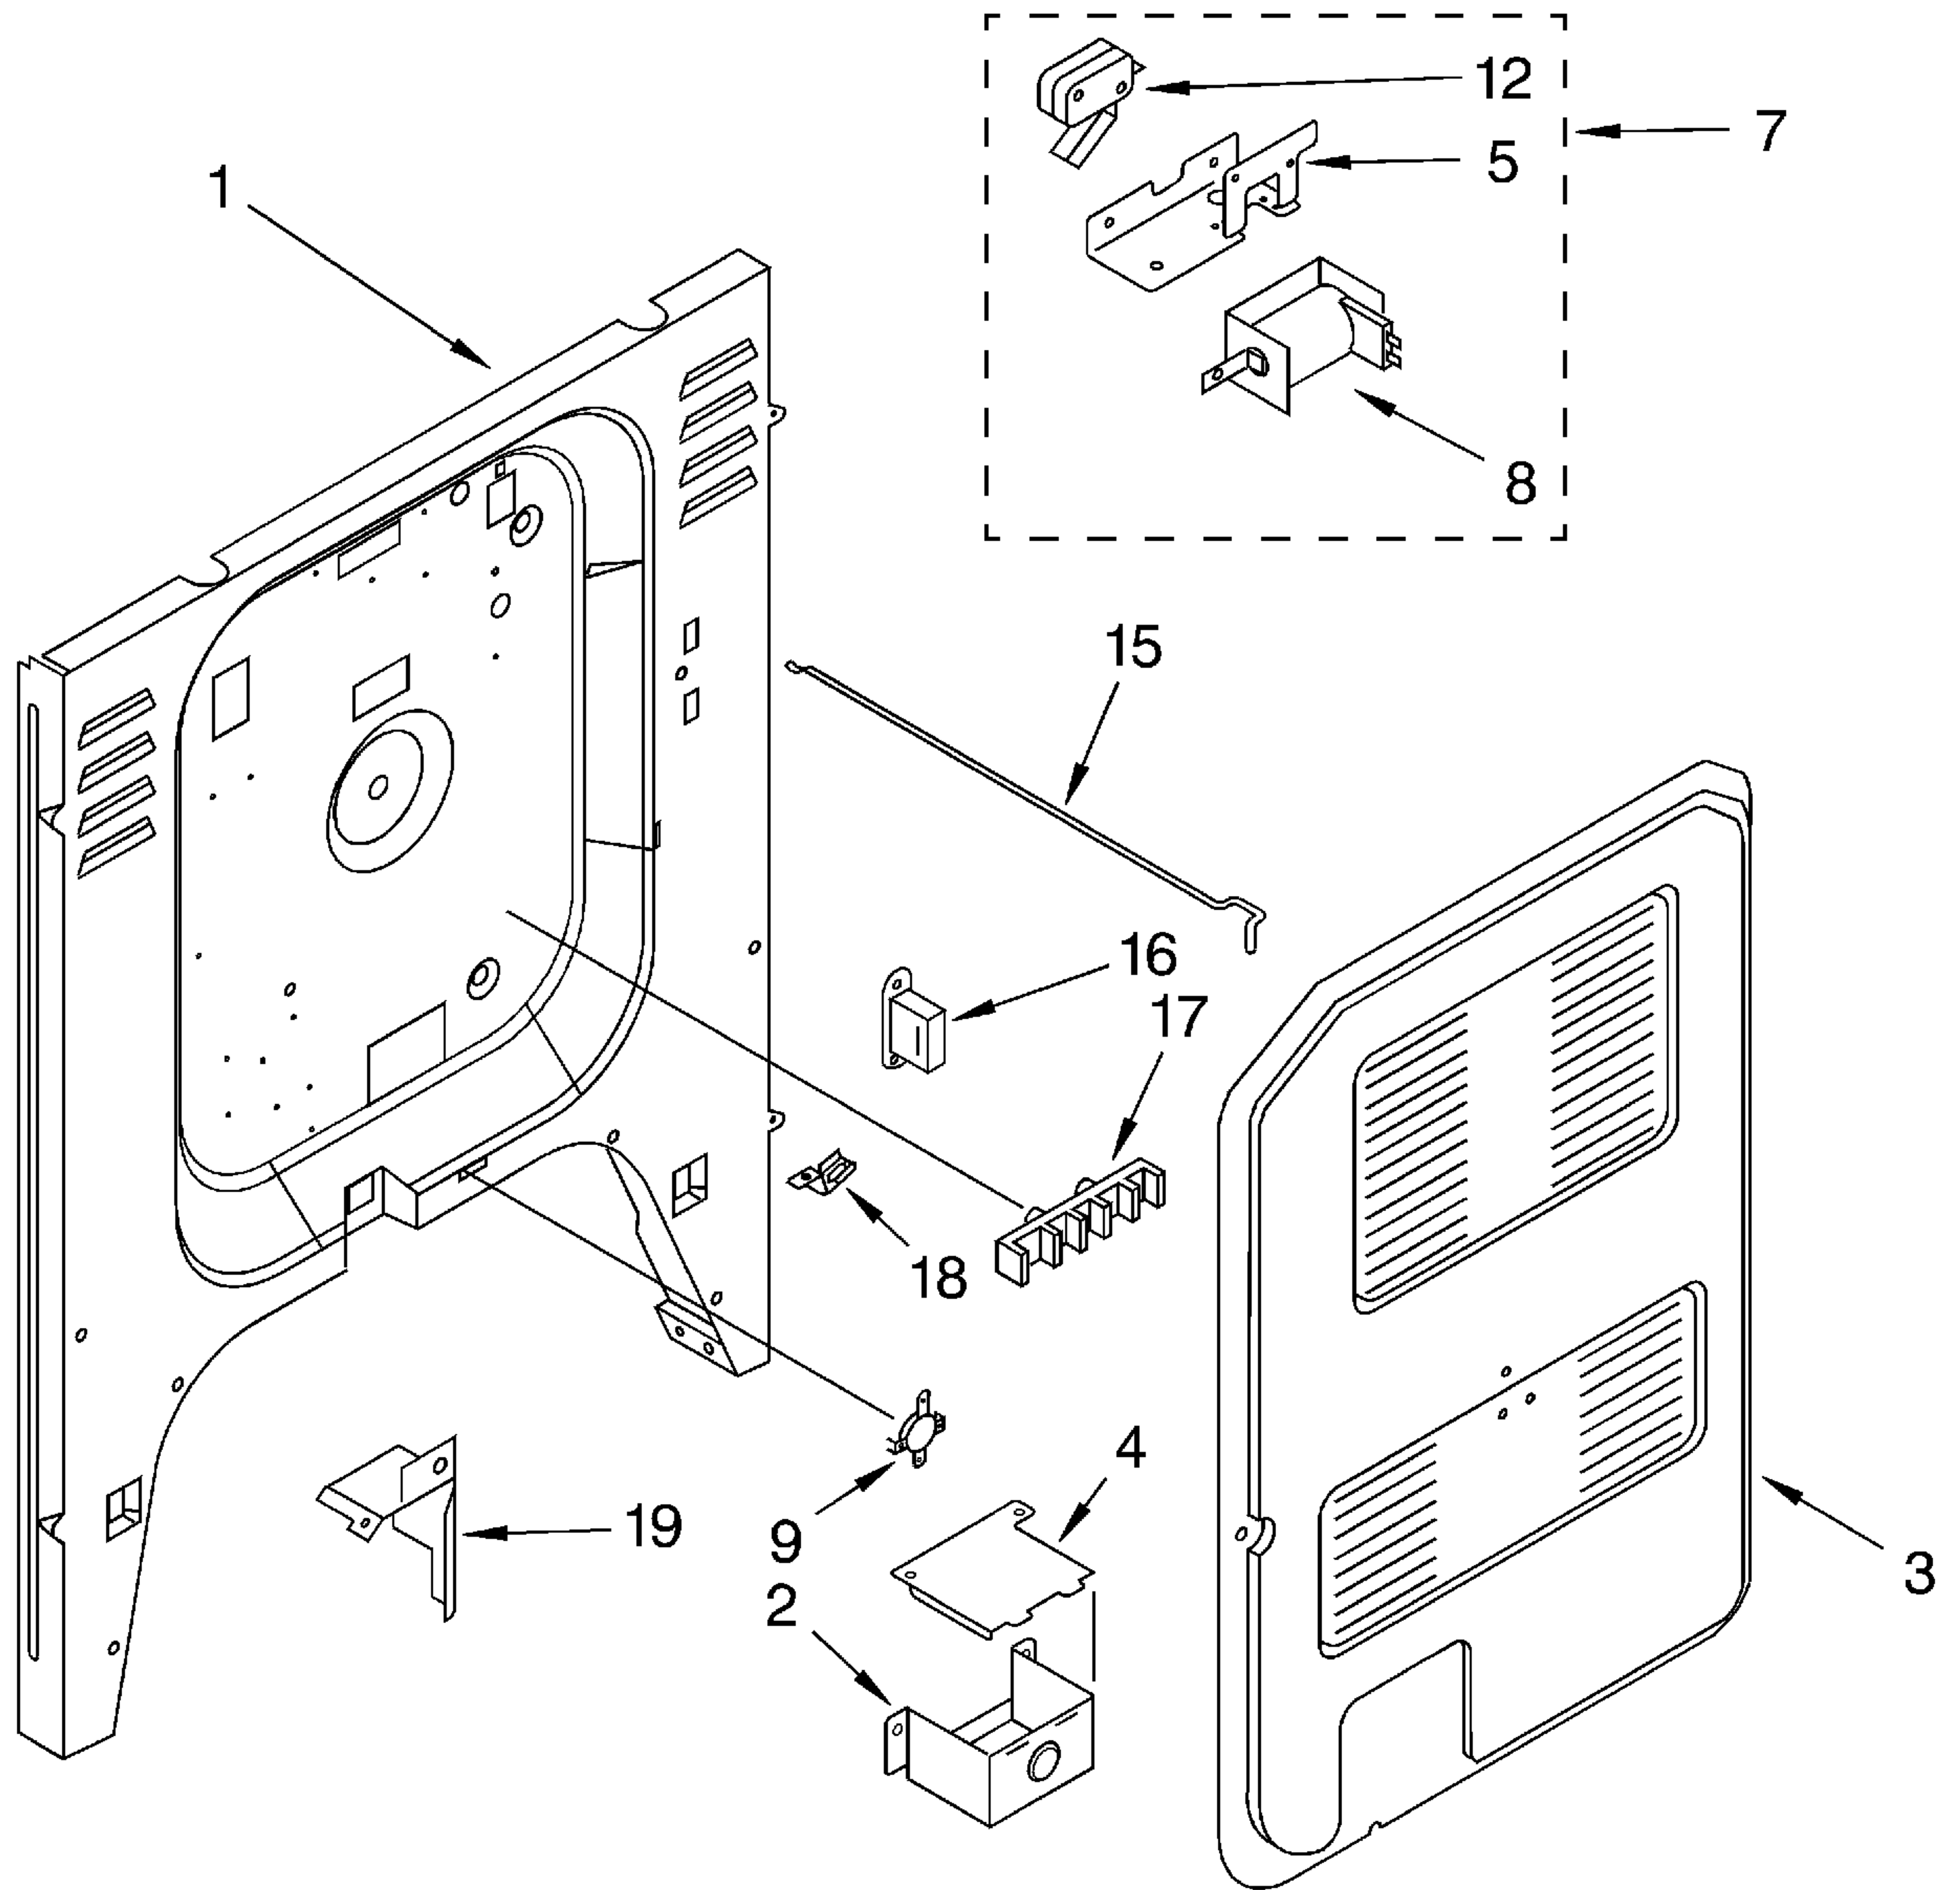

1	9751051	Back panel, Chassis
	4211813	Screw, (4)
2	9752344	Box, Terminal
	9780265	Screw, (1) 10 x 3/8
3	9751353	Panel, Rear Cover
	4211813	Screw, (2)
4	9752345	Cover, Terminal Box
5	9751418	Bracket, Lock
	9780265	Screw (2) 10 x 3/8
7	9751439	Oven Lock Assembly
	9780265	Screw (2) 10 x 3/8
8	9751590	Solenoid
	4159441	Screw, (2)
	4159500	Washer
9	3149652	Fuse, Safety
	9780265	Screw, 10x3/8 (2)
12	9751763	Switch, Interloc
	9750887	Screw, (2)
	9750888	Nut (2)
15	9750523	Rod, Lock
16	3191044	Ballast, Light
17	258076	Terminal Block
	98884	Screw, 10-16 x 1
18	3169573	Ground Strap
	313660	Clip, (1)
	690989	Screw, Grounding
19	9751798	Vent Back, Oven
	9780265	Screw (2)

SPLICING WIRES--25FT. LENGTH

242828	Wire, Black 12 Ga. 150~c
242820	Wire, Black 14 Ga. 150~c
242821	Wire, Blue 14 Ga. 150~c
242822	Wire, Brown 14 Ga. 150~c
242830	Wire, Brown 14 Ga. 200~c
242823	Wire, Green 14 Ga. 150~c
242824	Wire, Orange 14 Ga. 150~c
242829	Wire, Red 12 Ga. 150~c
242825	Wire, Red 14 Ga. 150~c
242831	Wire, Red 14 Ga. 200~c
242826	Wire, White 14 Ga. 150~c
242827	Wire, Yellow 14 Ga. 150~c
242832	Wire, Yellow 14 Ga. 200~c

PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond
72109	New Avocado
72108	Coffee
72110	Harvest Gold
72112	Toast
72113	Platinum
511873	**White Porcelain (2 Oz.)

**Note: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.

PAINT, PRESSURIZED SPRAY (13 oz.)

350930	White
350956	Almond
261888	New Avocado
261886	Coffee
261890	Harvest Gold
285365	Toast
285366	Platinum
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
261891	Harvest Gold (Uncut)
285367	Toast (Uncut)
285368	Platinum (Uncut)

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean (1/2 Pt.)

INSULATION

9750222	Insulation, Wrap
9750221	Insulation, Rear

CLEANER, COOKTOP

9780196	Glass Cleaner
---------	---------------

ANTI-TIP KIT

9751745	Anti-Tip Kit
---------	--------------

LITERATURE PARTS

LIT9752043	Installation Instructions
LIT9751685	Use & Care Guide
LIT9780959	Cookbook T/C Ovens
LIT9751598	Tech Sheet
LIT9752014	Wiring Diagram
LIT9752390	Smart & Easy Guide

WIRING HARNESS PARTS

9752366	Harness, Wire (Main Harness)
9781486	Harness, Wire (Cooktop)
9752036	Harness, Wire (Ceran)
9750376	Harness, Wire (Oven Door)
9752343	Harness, Wire (Halogen Light)
9751837	L2 - Electric
9751868	Grommet, Harness
9751139	Harness, Wire (Meat Probe)
20082084	Tie, Wire
9751750	Harness, Wire (Top Light)